 


# ELECTRIC EASY-ASSEMBLY DESK - SUDEZ

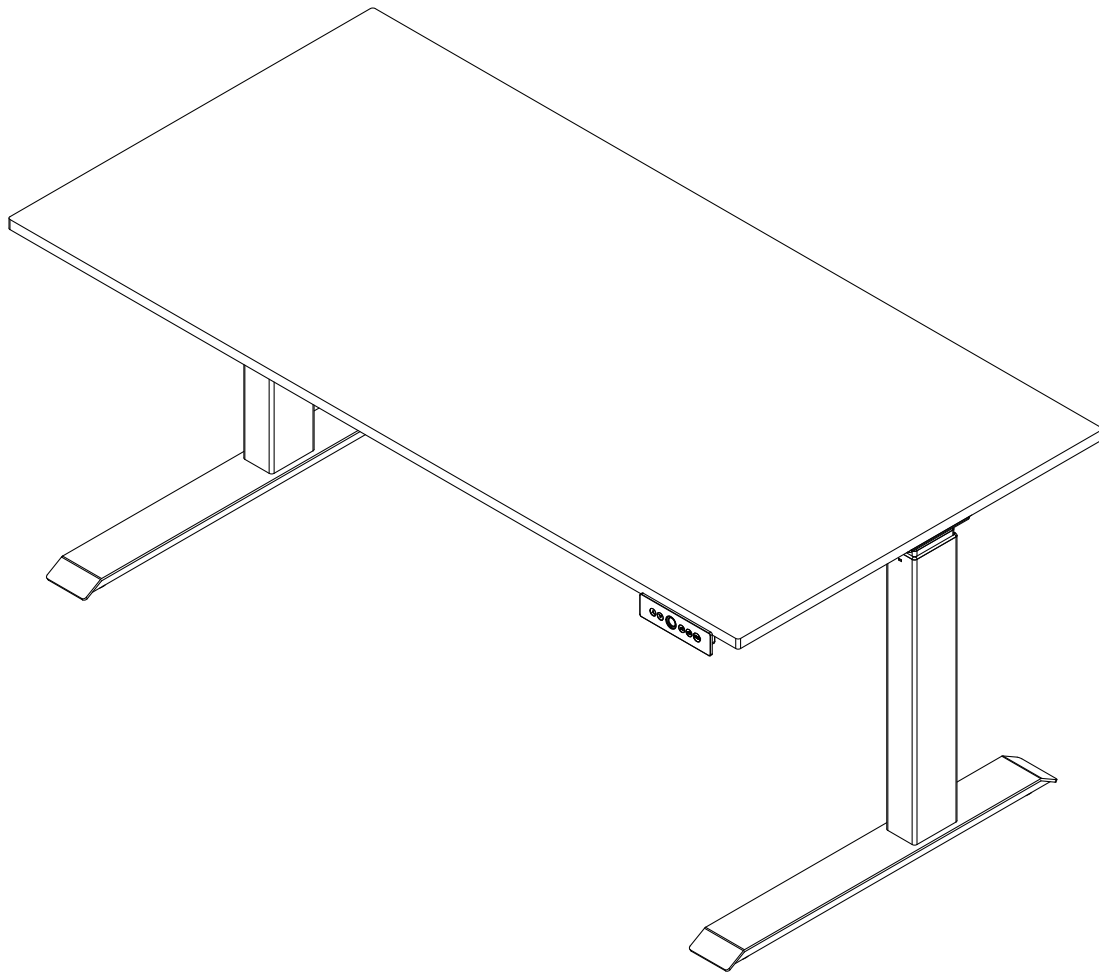

Prefer video instructions?  
View our video page!

 
 
 
 
 
 
 
 
 
 


Questions or concerns?  
Contact us directly!



1-855-843-7920  
[CustomerService@StandUpDeskStore.com](mailto:CustomerService@StandUpDeskStore.com)


# MULTI-BOX BREAKDOWN NOT TO SCALE

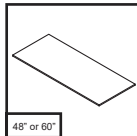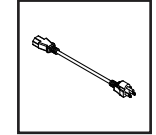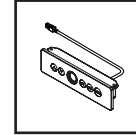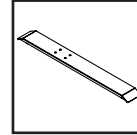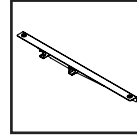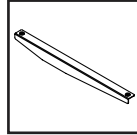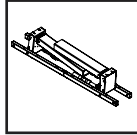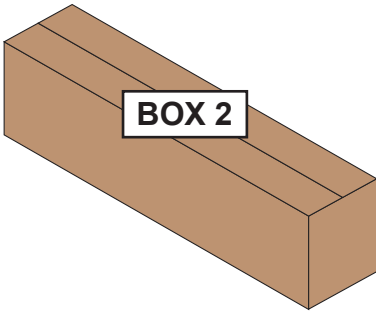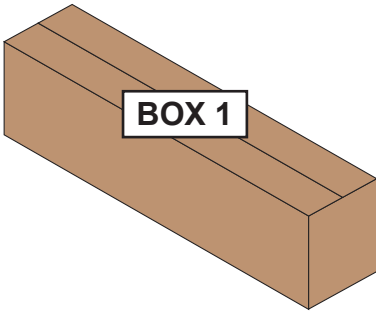


48" or 60"

## PARTS INCLUDED NOT TO SCALE

 
**A QTY: 1**

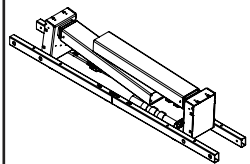


**B QTY: 1**

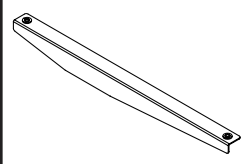 


**C QTY: 1**

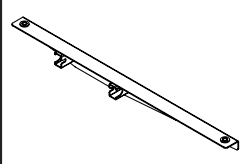 


**D QTY: 2**

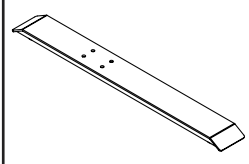 


48" or 60"

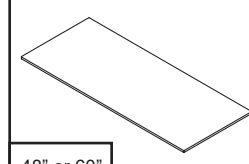 

**F QTY: 1**

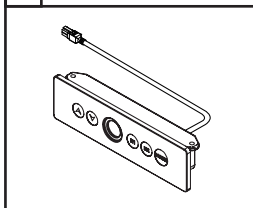 

**G QTY: 1**

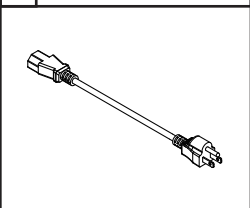 

## HARDWARE INCLUDED NOT TO SCALE

**QTY: 4**



M6-12

**QTY: 8**



M8-20

**QTY: 12**



M6-16

**QTY: 2**




ST3.5-13

**QTY: 12**




#8x3/4
 
## TOOLS INCLUDED

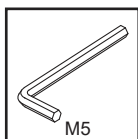

M5

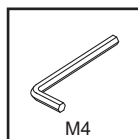 


M4


## TOOLS REQUIRED



 OR




1


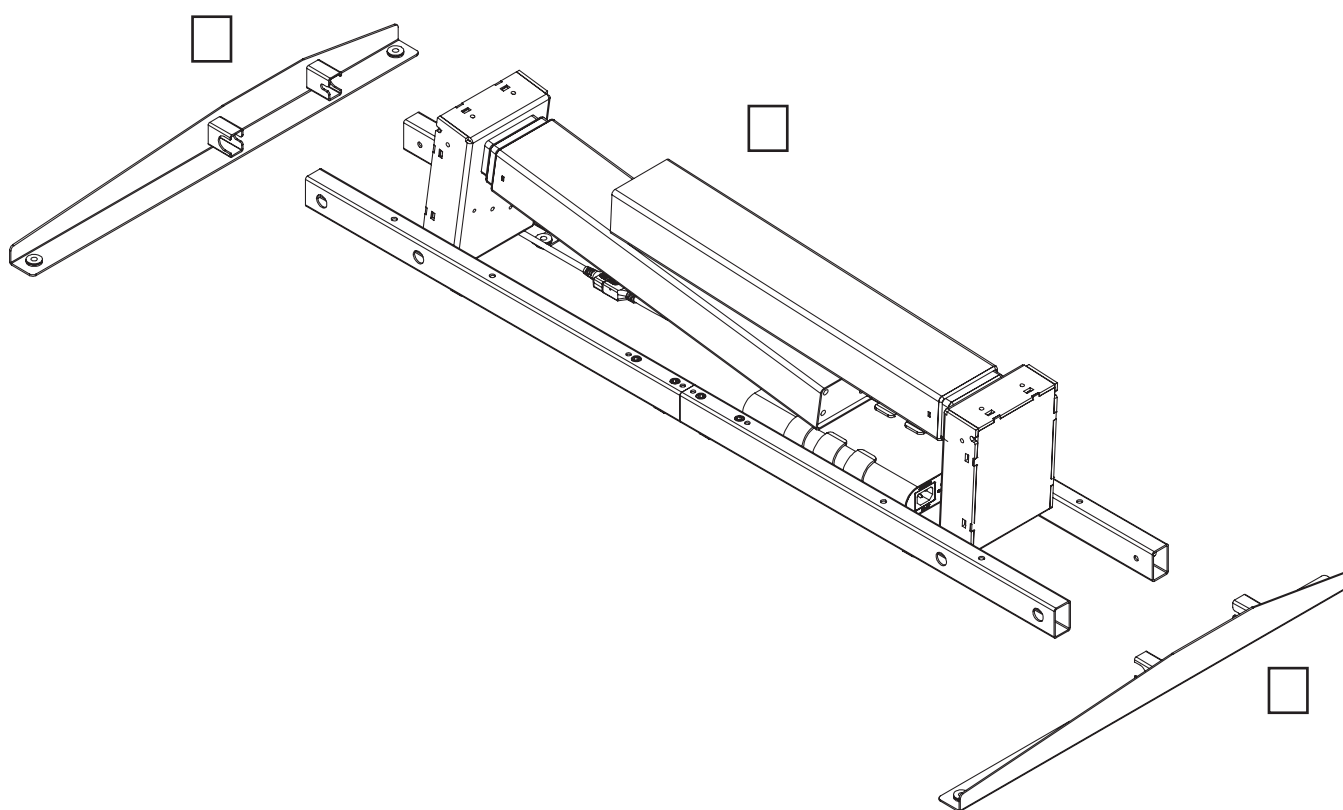 





2


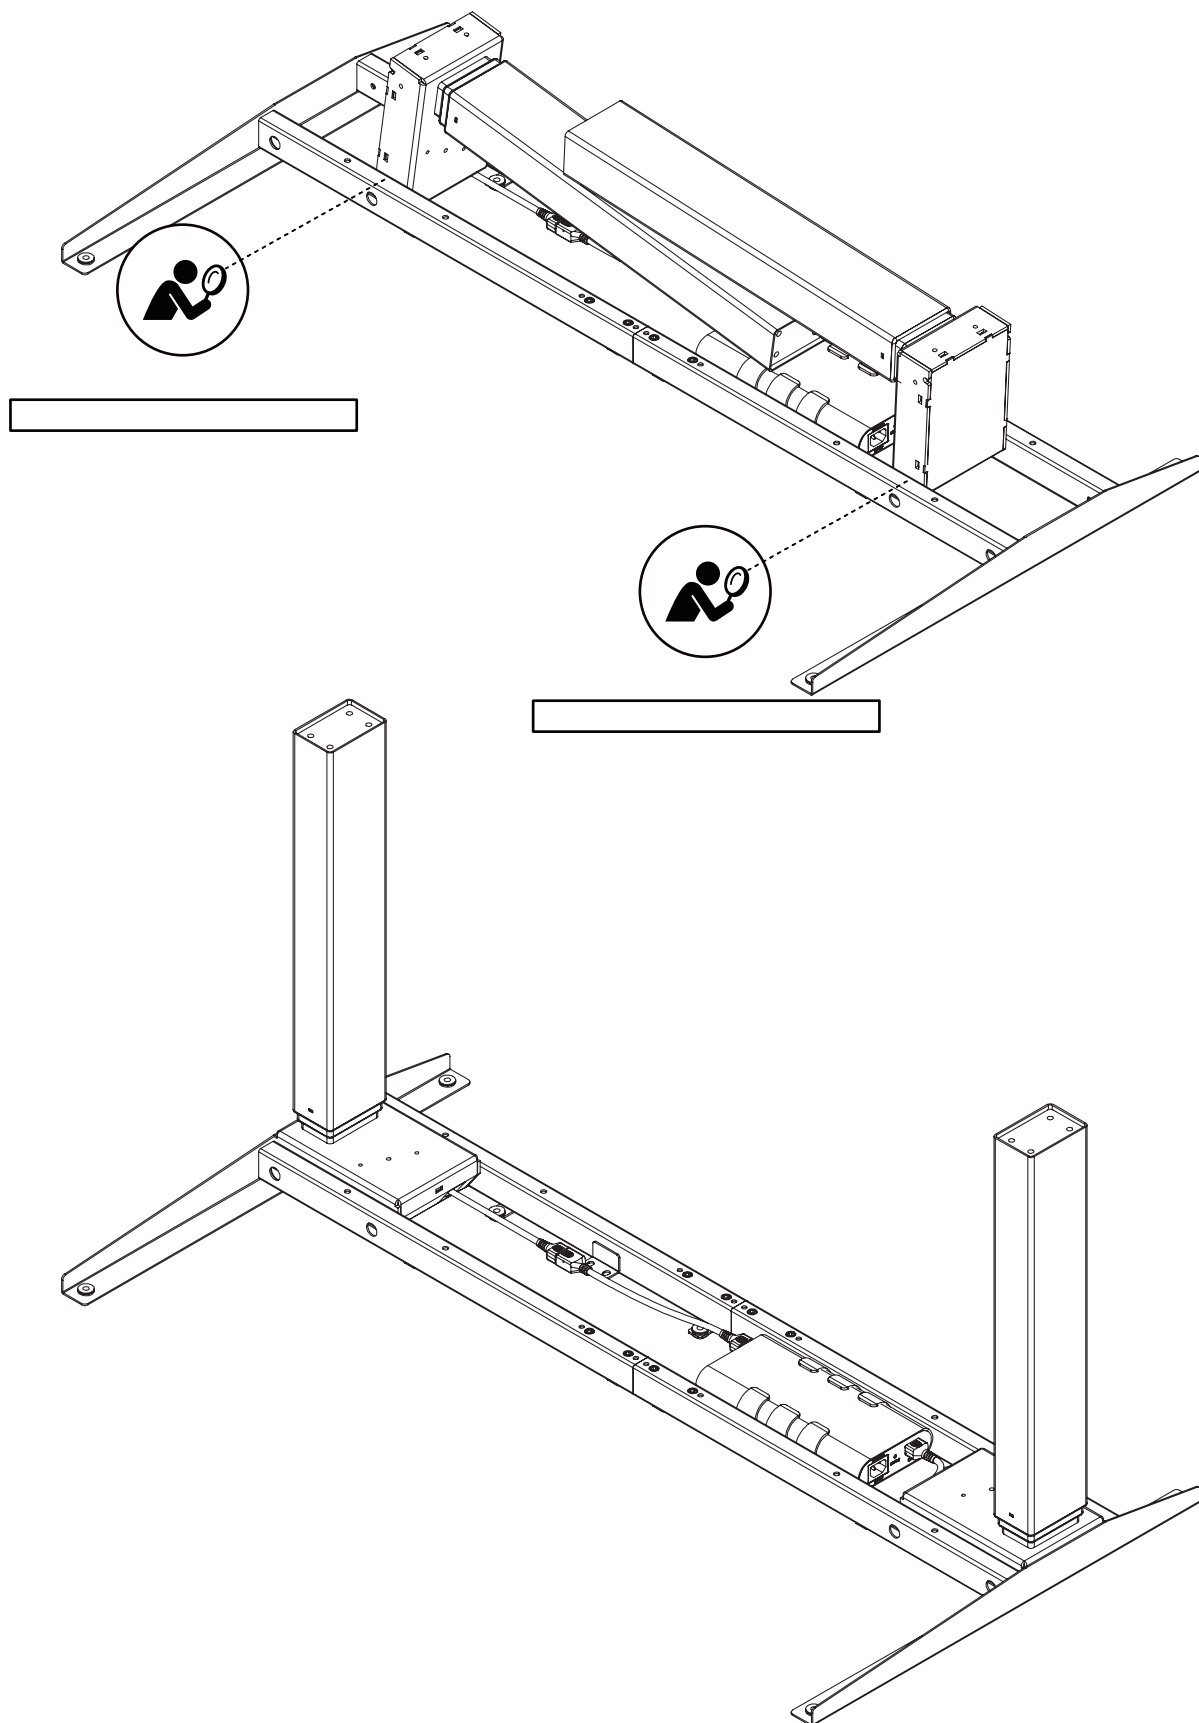 



3

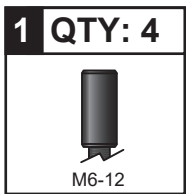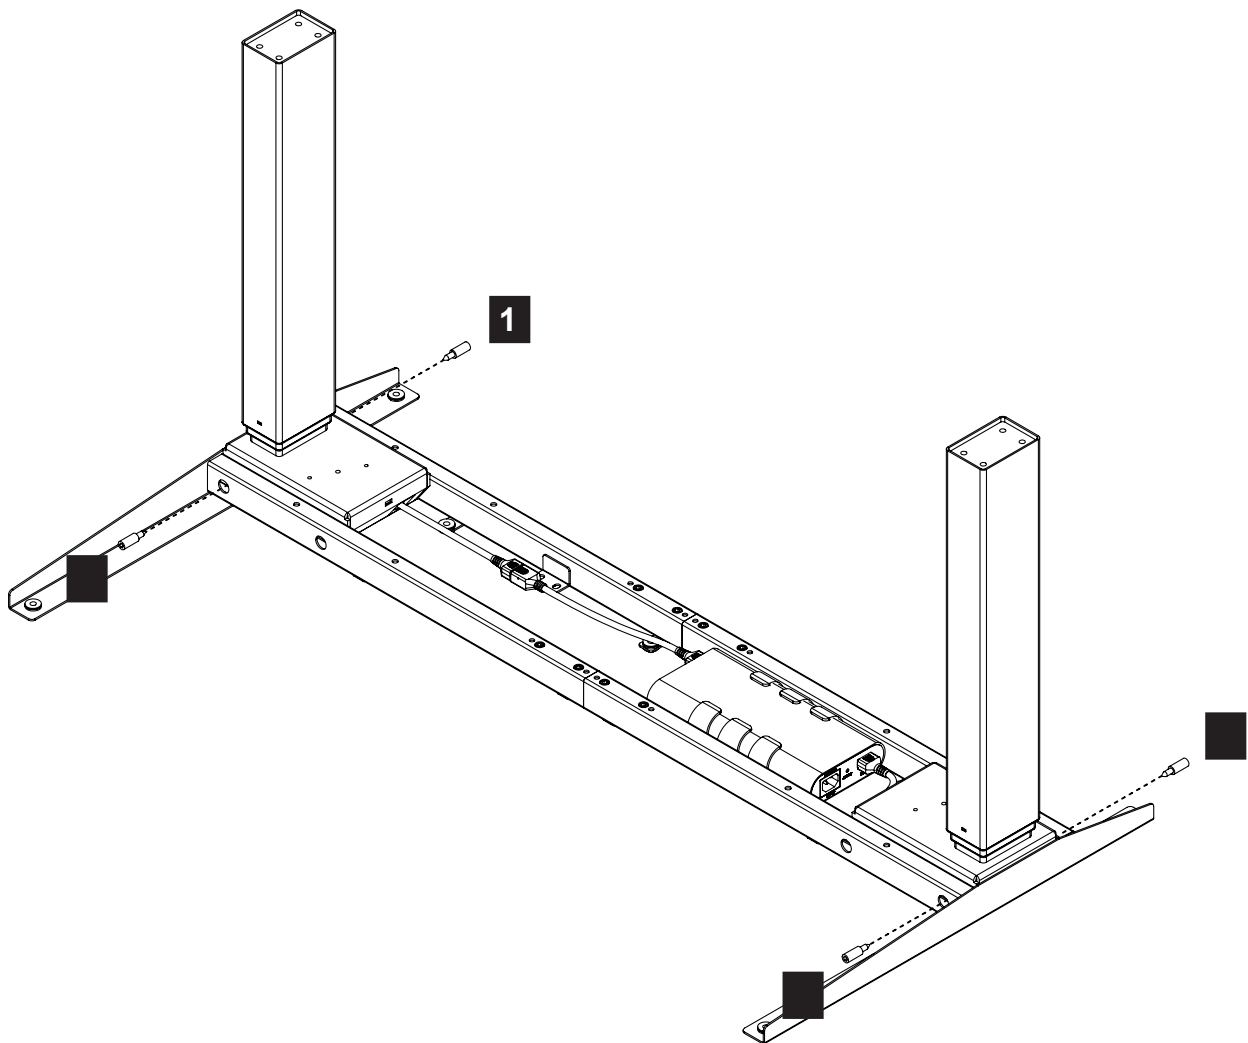  

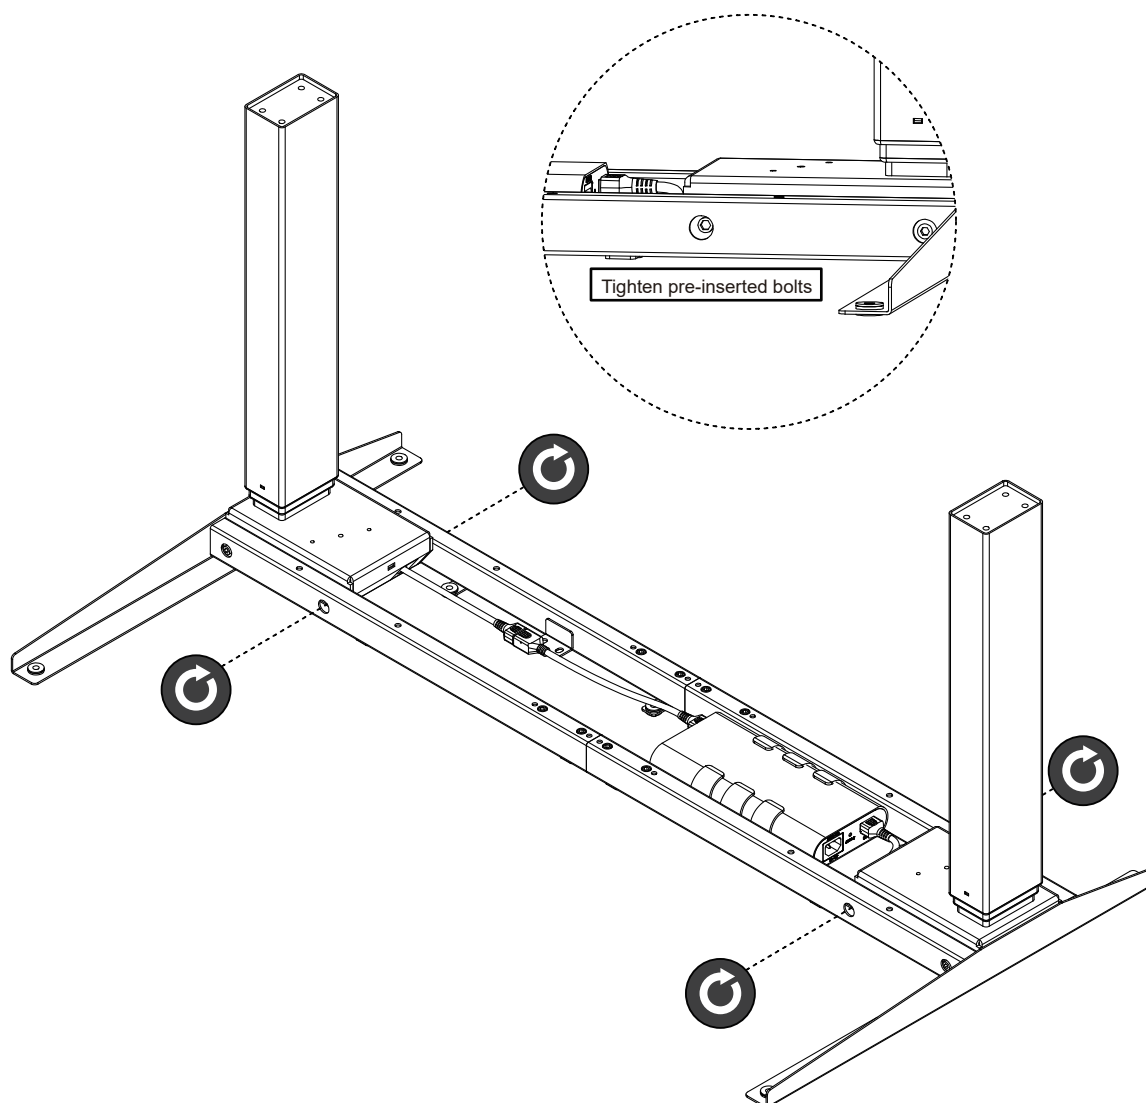 


5

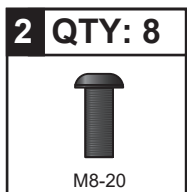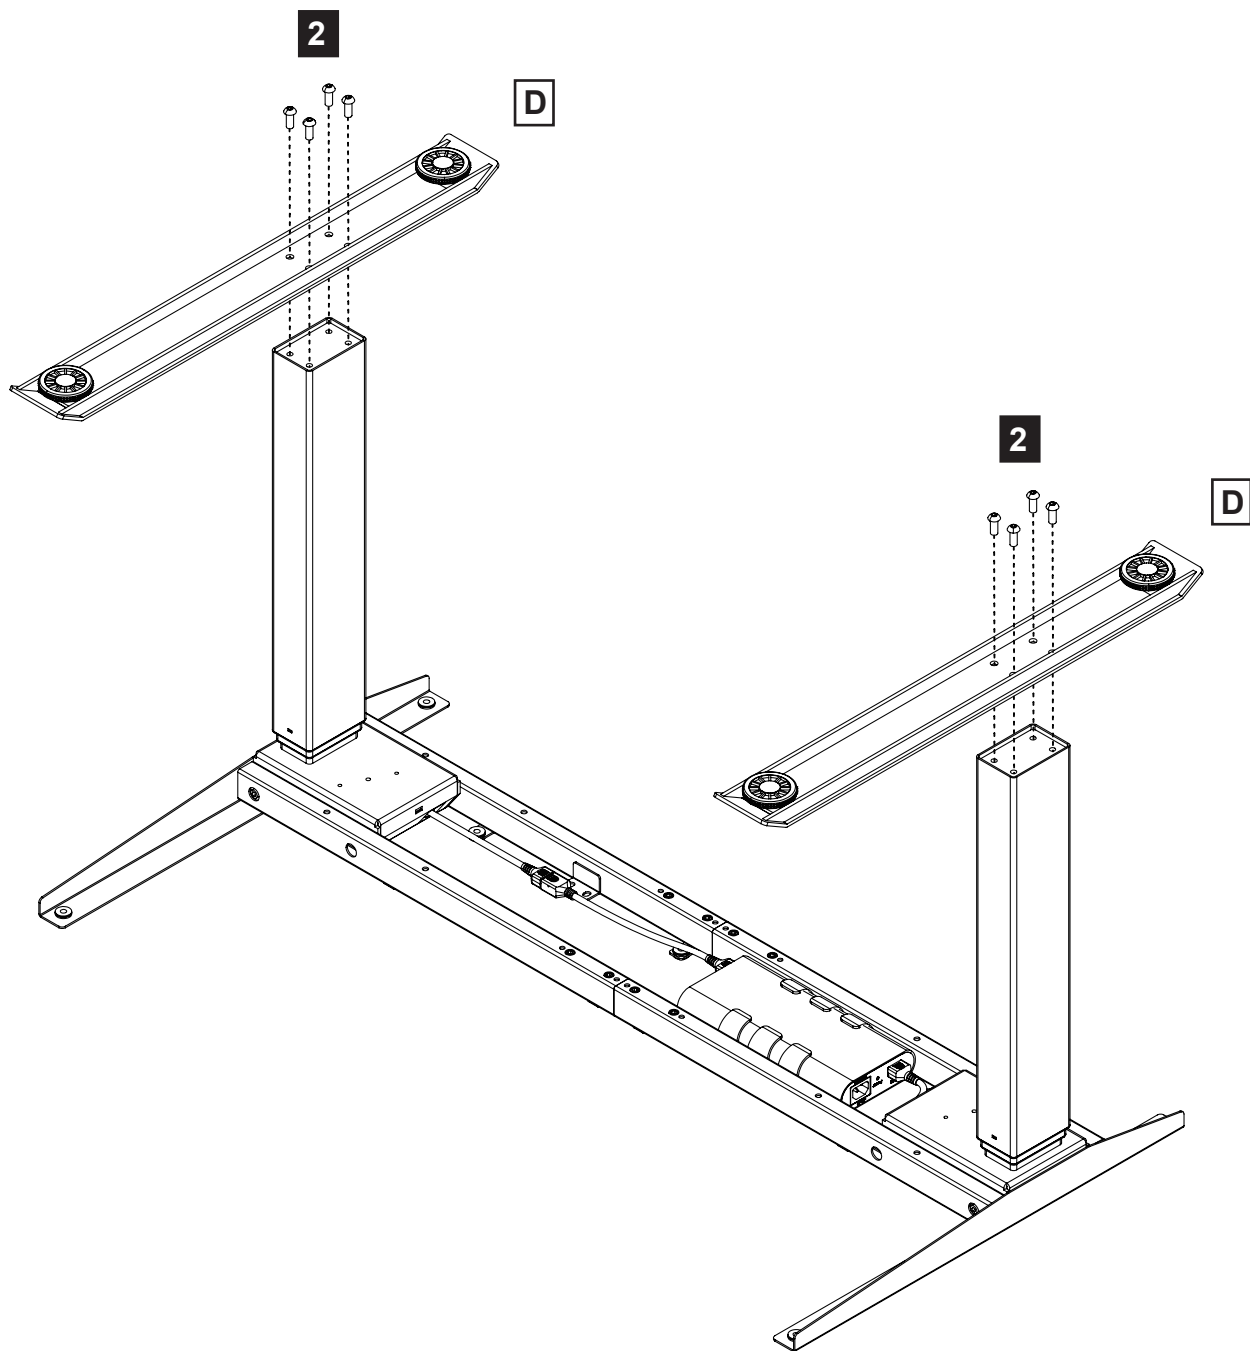  

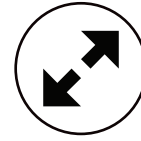 

 **If using 60" or 72" desktop:**  
Loosen set screws 1 turn each,  
expand **A** frame

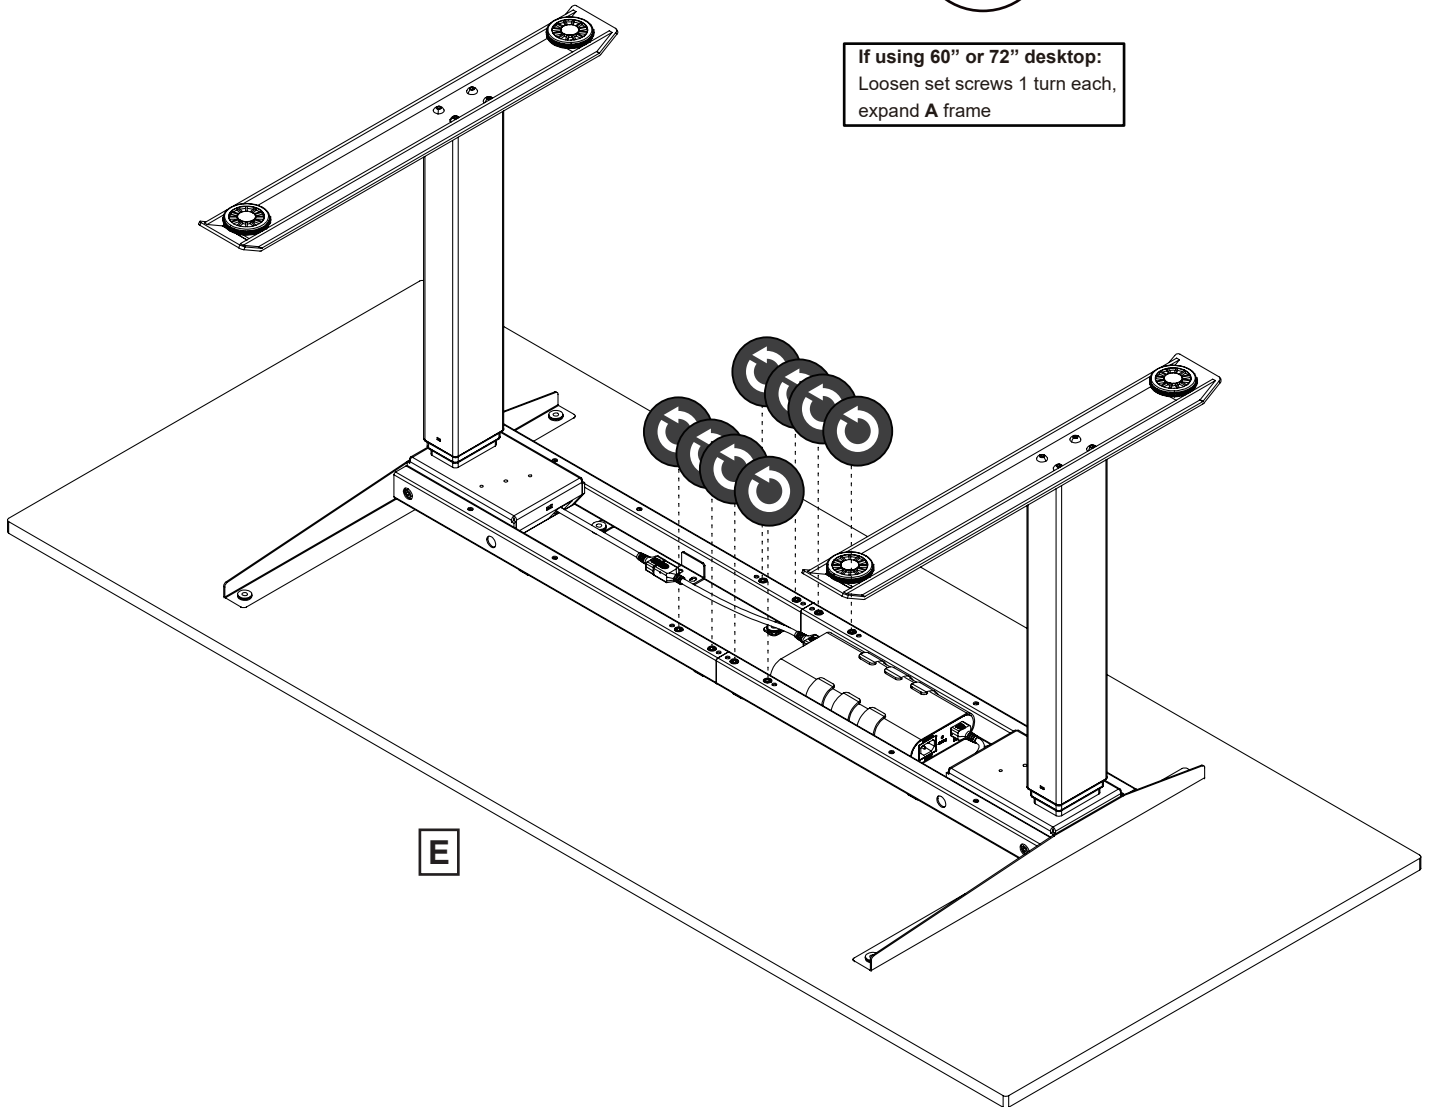



7



If using a desktop with threaded inserts, use hardware 3

  If using a desktop without threaded inserts, align according to diagram below, use hardware 7

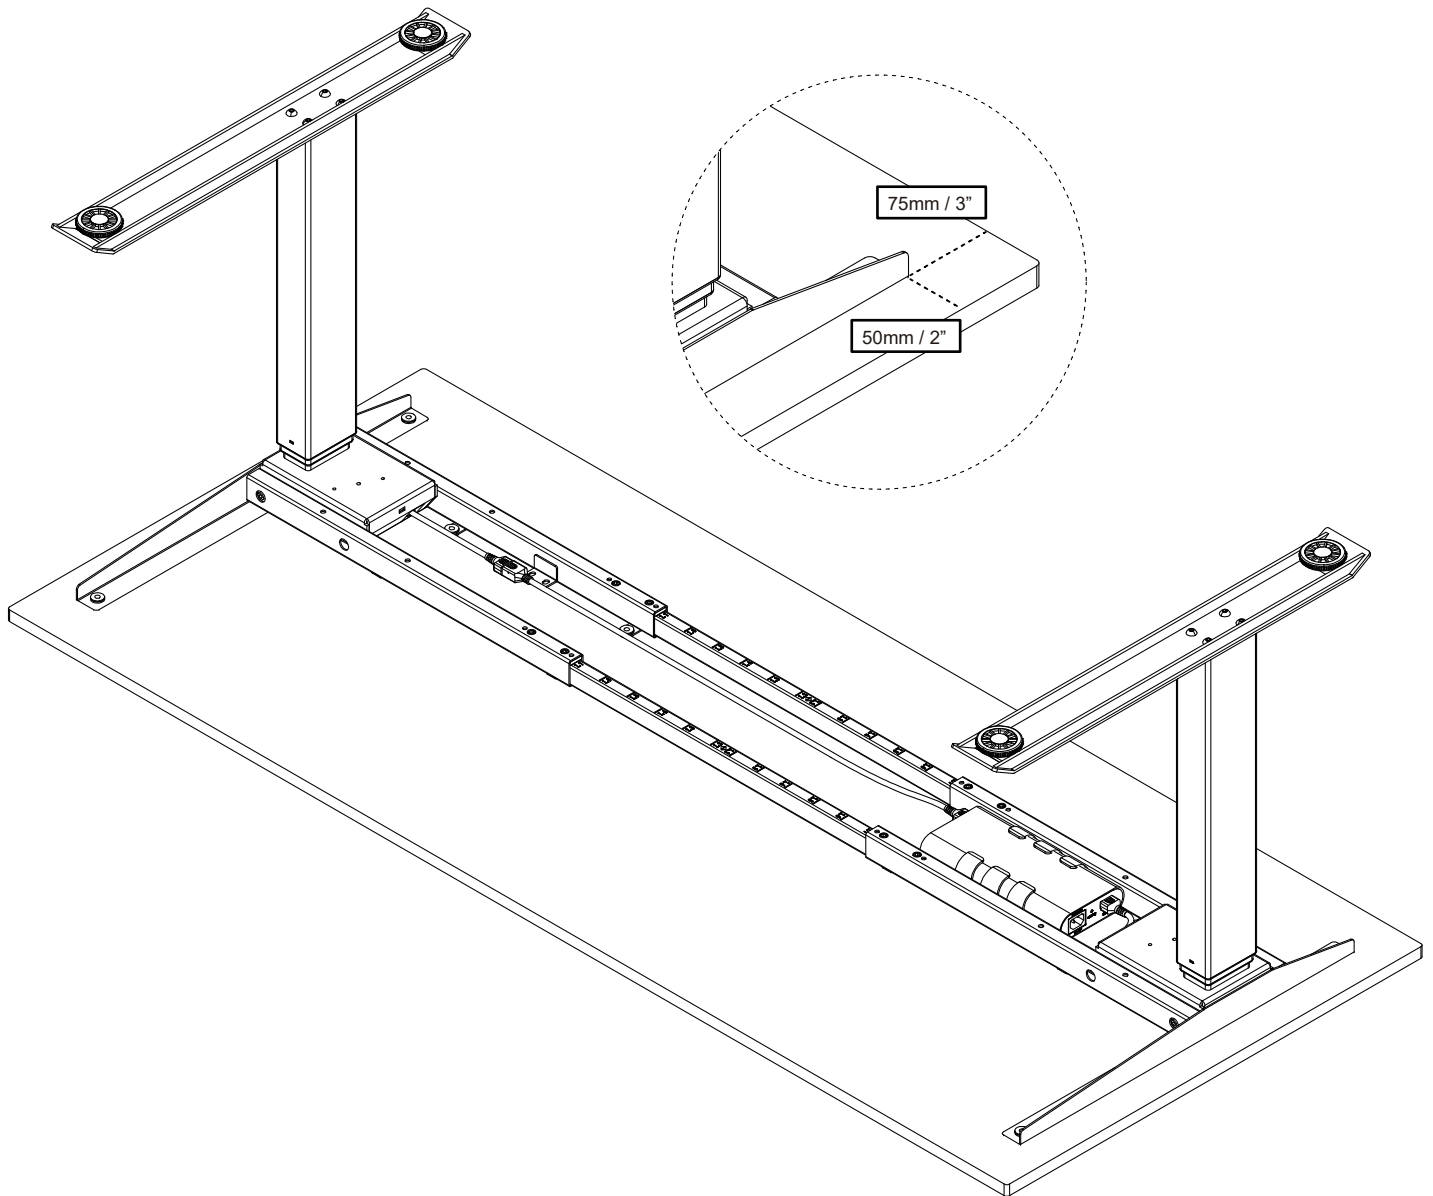


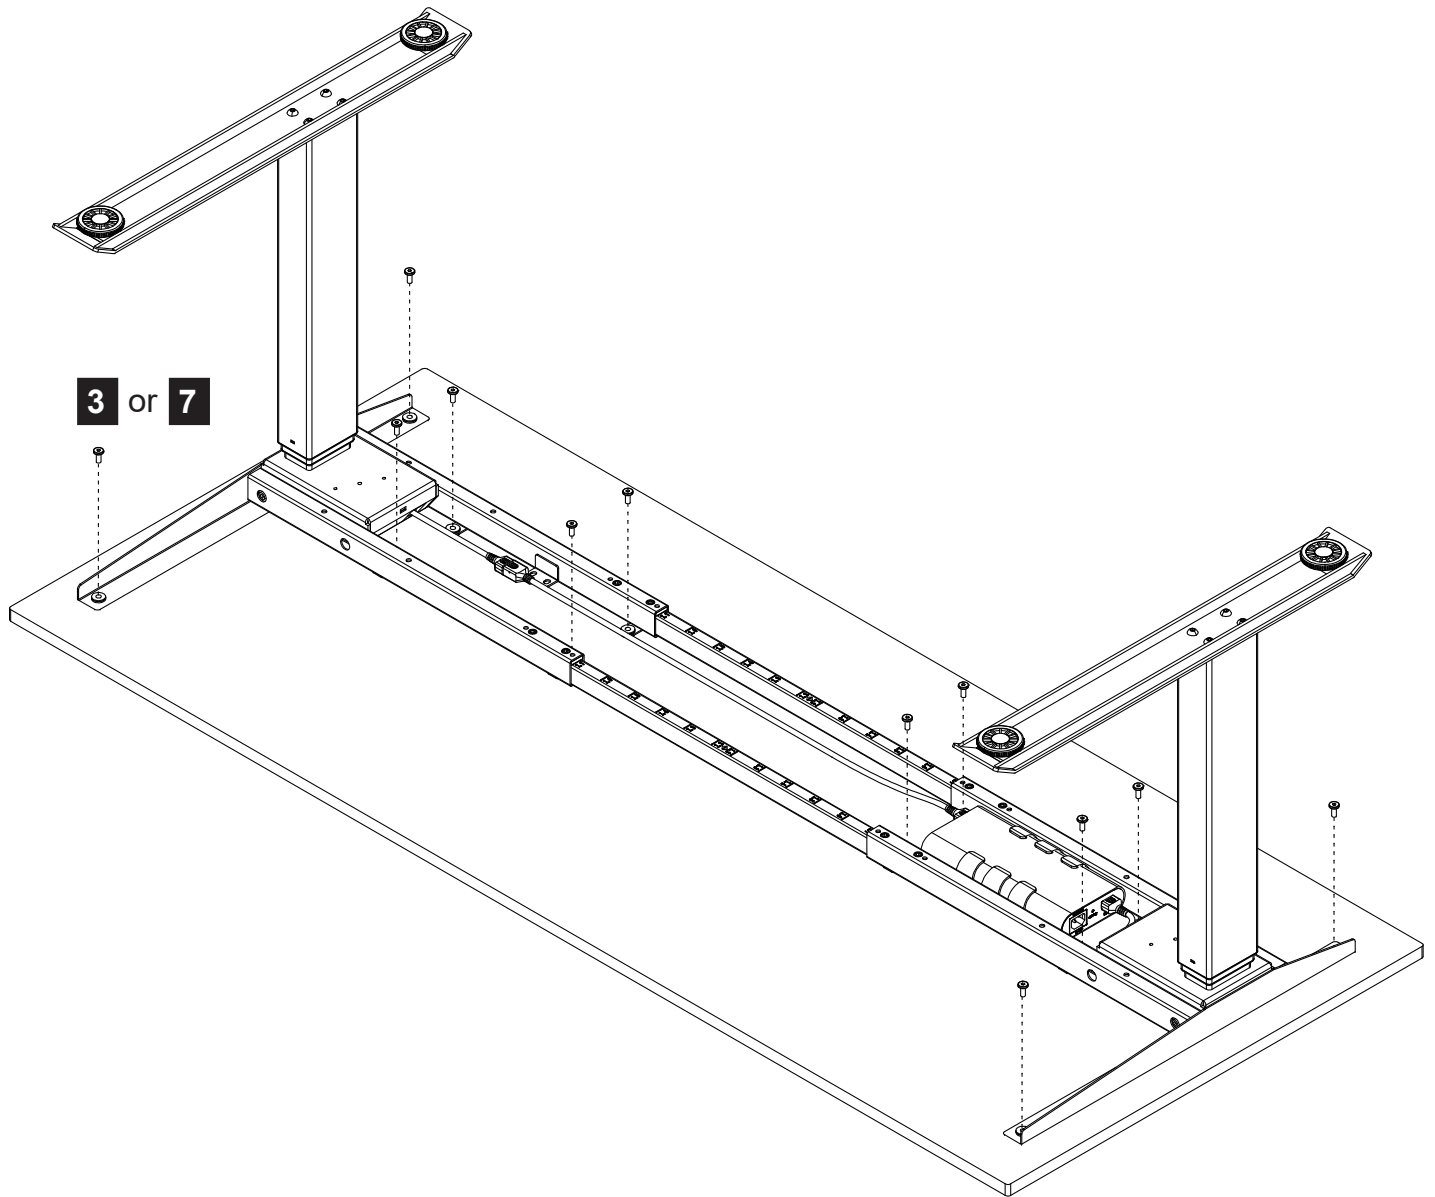**3 QTY: 12**


M6-16


**5 QTY: 12**
  
#8x3/4

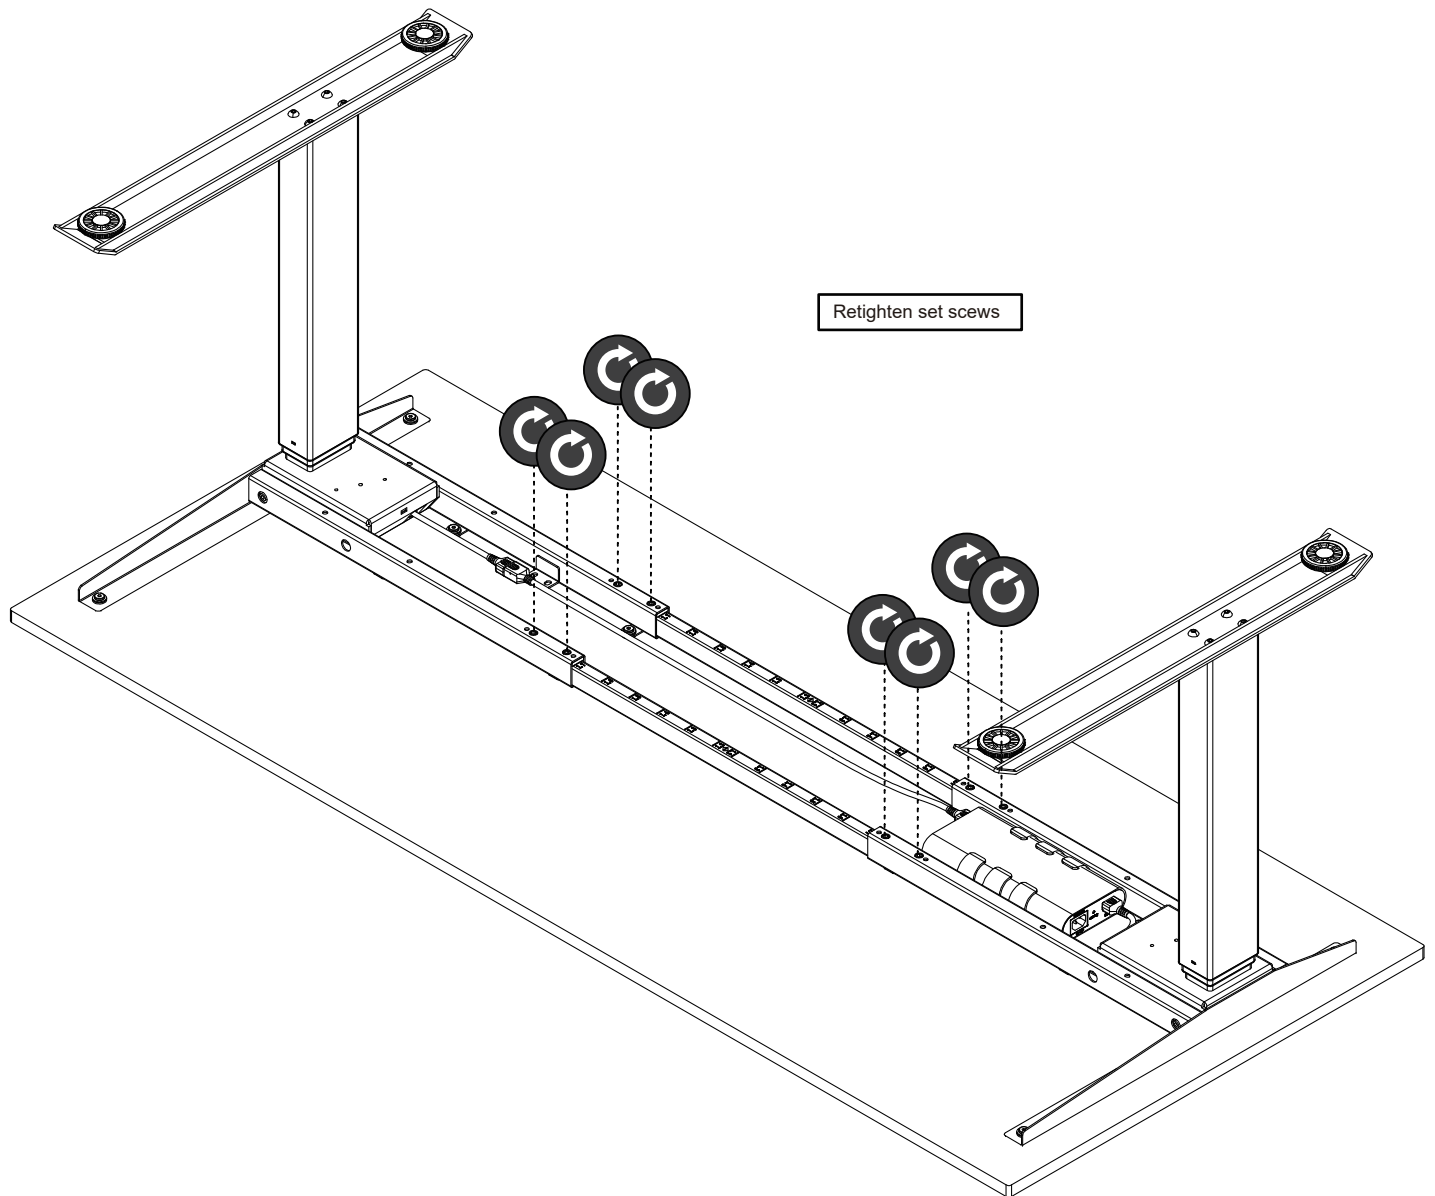




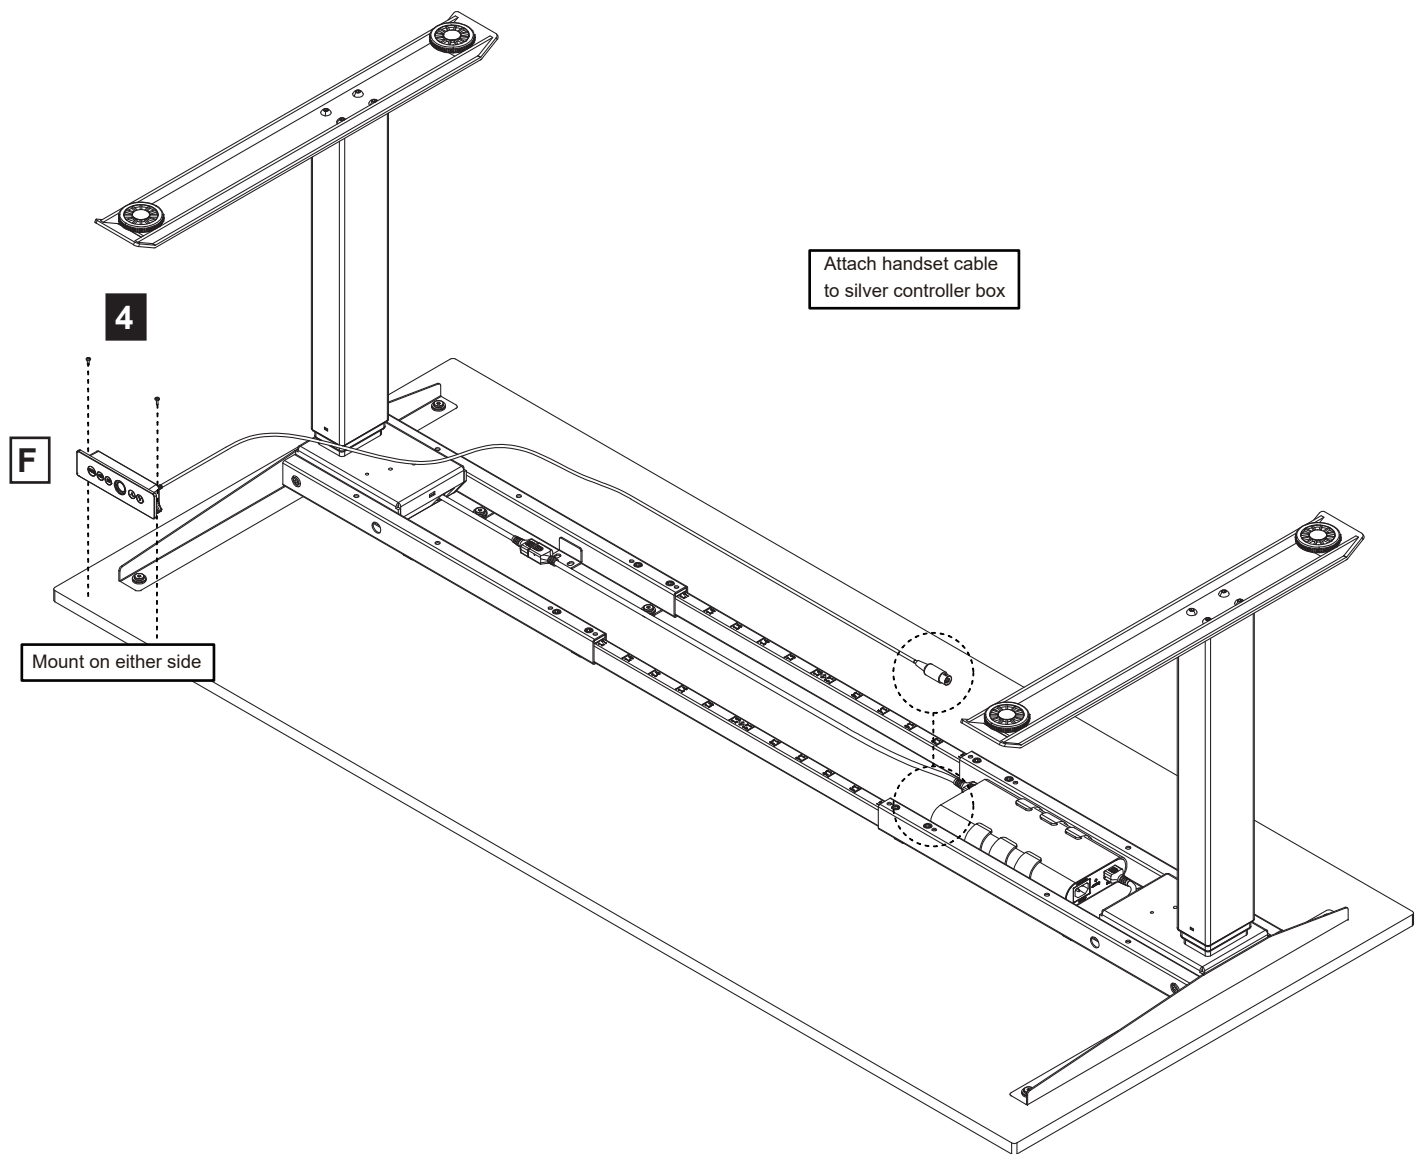

4	QTY: 2
	
ST3.5-13	




 Attach power cable to silver controller box, do not plug into wall until after you flip desk over (Step 12)

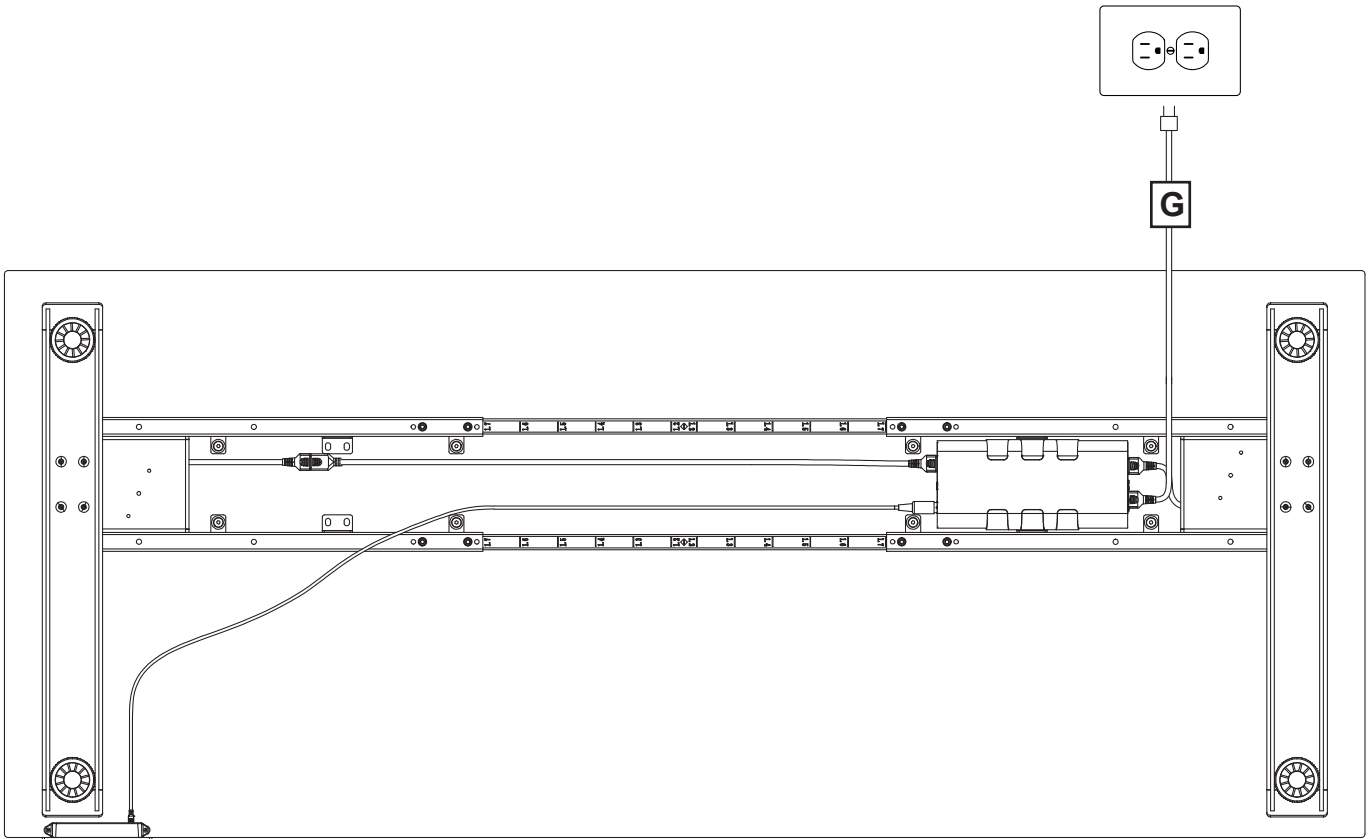




 
With assistance, flip desk over,  
great job!

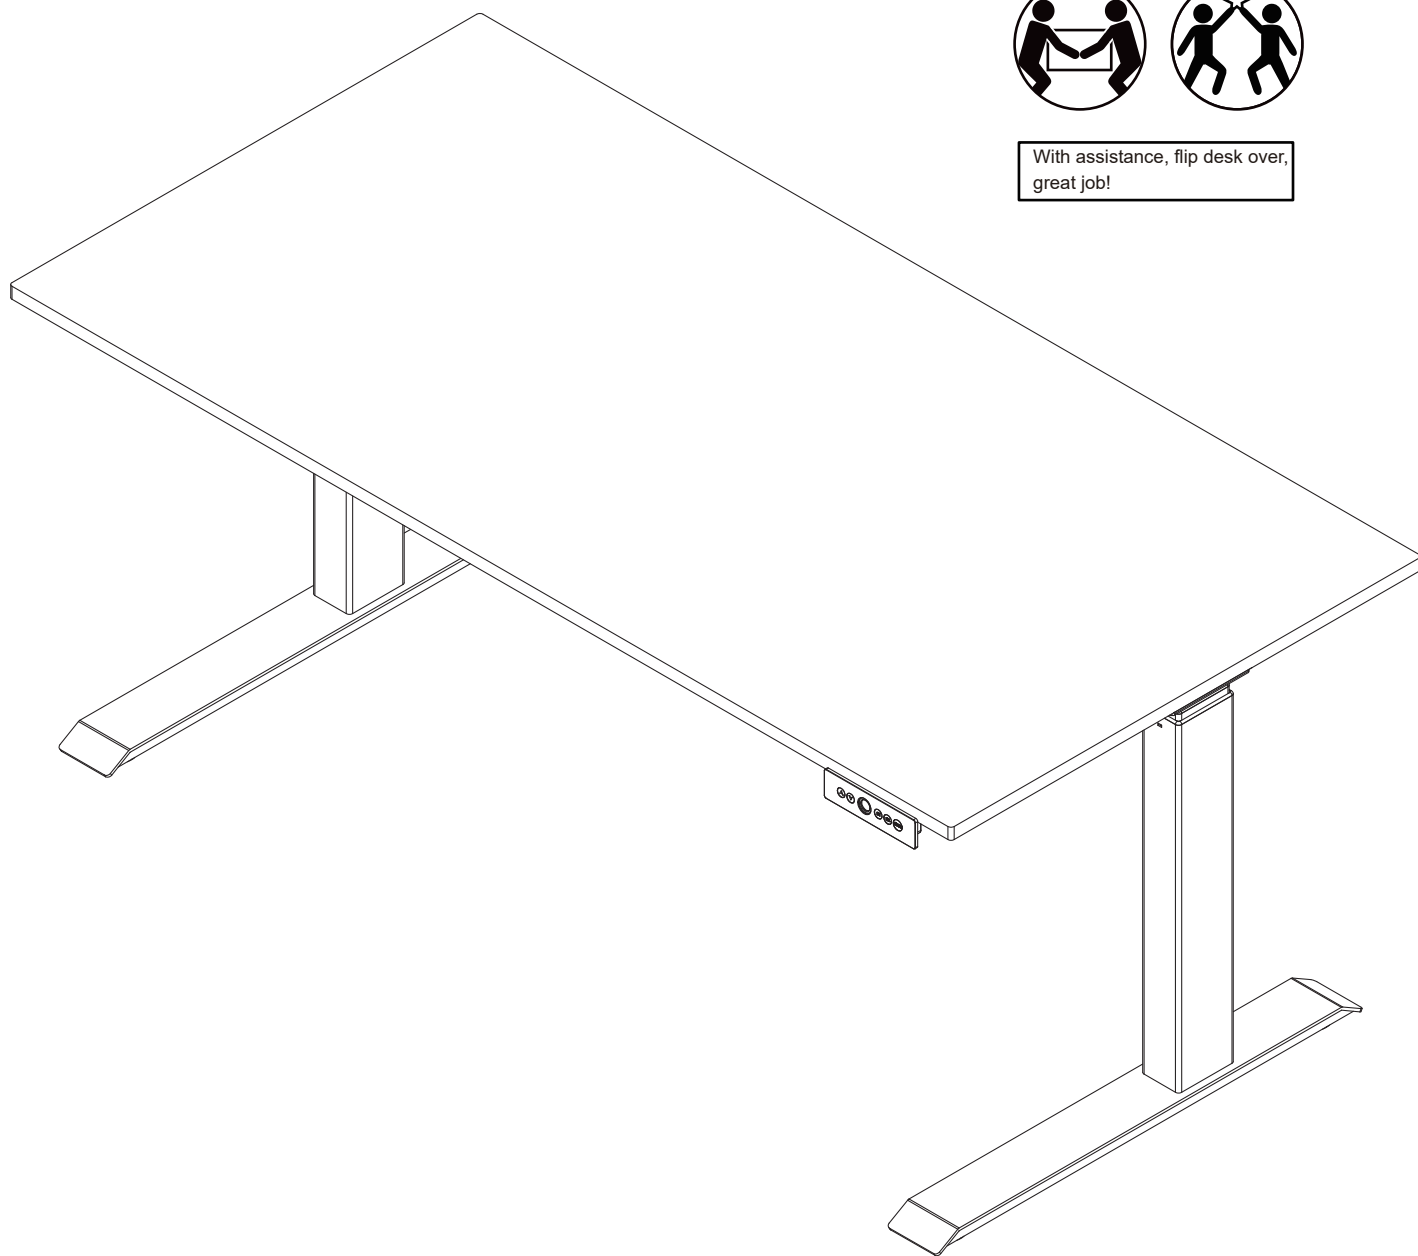

# HANDSET

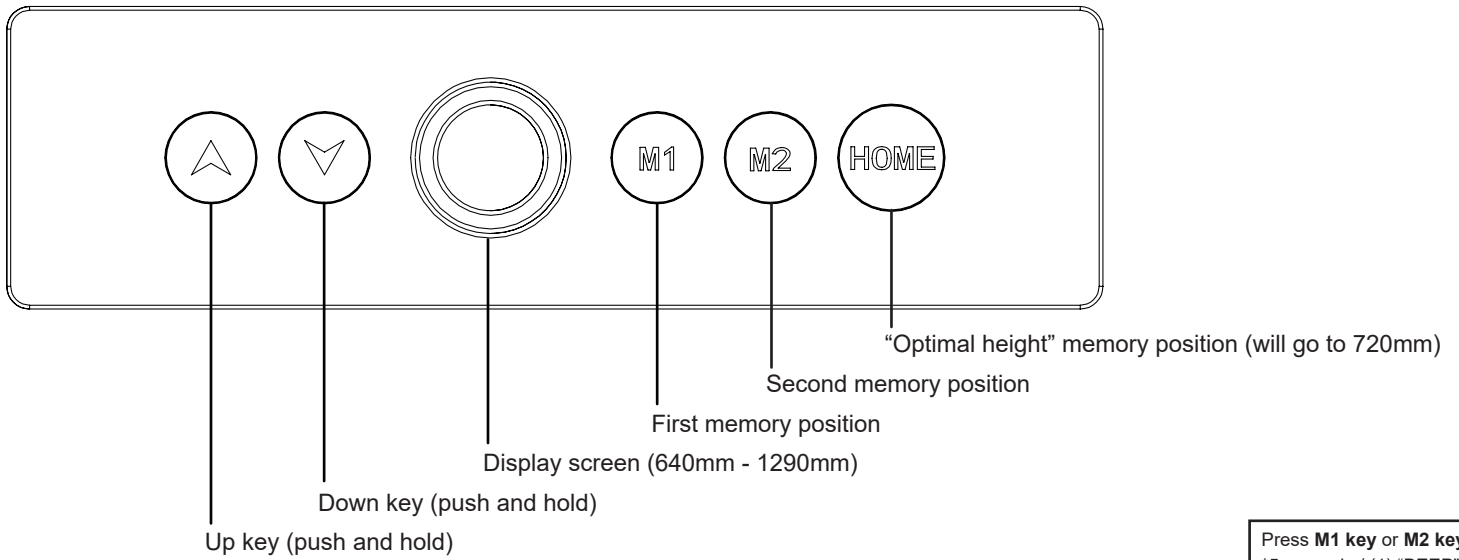 

# SETTINGS

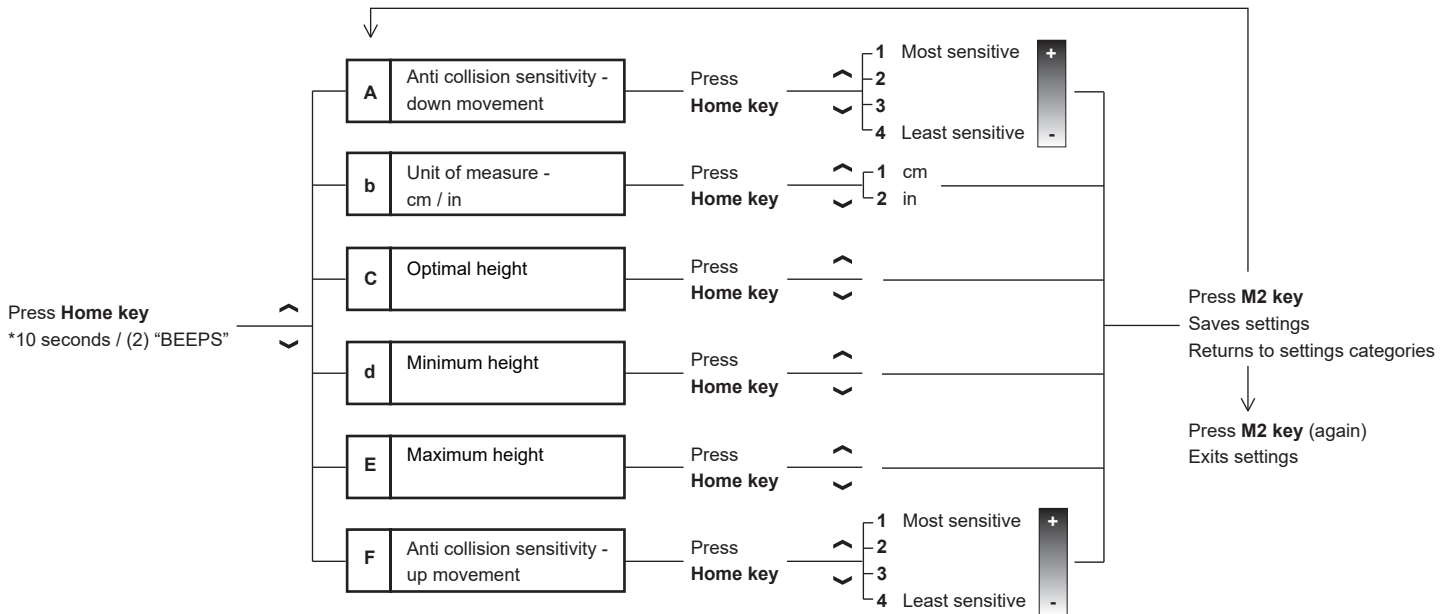 

# TROUBLESHOOTING

See an error code on your handset and not sure what to do? Use this guide to quickly identify and fix the problem.

ERROR	PROBLEM	SOLUTION
ER1	Motor issue	Complete a <b>Hard Reset</b>
ER2	Synchronization issue	Complete a <b>Hard Reset</b>
ER3	Cable issue	Complete a <b>Hard Reset</b>
ER4	Communication issue	Complete a <b>Hard Reset</b>
ER5	Weight limit issue (Desktop load exceeded 397 lbs)	Complete a <b>Standard Reset</b> If the desk still does not function properly, complete a <b>Hard Reset</b>
HOT	Continuous use beyond two minutes	Complete a <b>Standard Reset</b> If the desk still does not function properly, complete a <b>Hard Reset</b>
ASR	Motor issue	Complete a <b>Hard Reset</b>

## STANDARD RESET INSTRUCTIONS

1. Press and hold the **down key** until the desk is at its lowest height.
2. Unplug the power cable from the wall for ten minutes.
3. After ten minutes, plug the power cable back in, ensuring it is properly attached.

## HARD RESET INSTRUCTIONS

1. Press and hold the **down key** until desk is at its lowest height.
2. Unplug all the cables attached to the desk - the power cable, the handset cable, and the motor cables.
3. Press and hold the **down key** for ten seconds.
4. Allow the desk to sit for ten minutes.
5. After ten minutes, plug all the cables back in (power cable must be last), ensuring they are all properly attached.

If the desk will not perform step 1, continue with steps 2 - 5, then re-perform a Hard Reset.