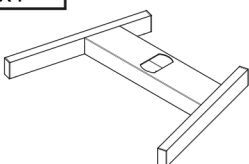





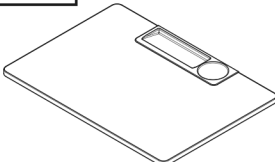












SUD-STUDENTP-GY Assembly Guide

1x1		2x2		3x2		4x4		5x1		6x1		7x1		8x1			
Ax4		Bx6		Cx6		Dx4		Ex8		Fx8		Gx2		Hx2		Jx2	
for 3/8"	M5x15mm	for M5	M5x15mm	1/4"x15mm	for 1/4"	M4x8mm	M4x35mm	M4x12mm									

1

2

Forward side

3

Forward side

4

Spring washer must be between the washer and the screw

5

6

7

Cable tie must be fixed inside groove