

Provided Hardware:



Replacement Cables

Suggested Hardware:



Replacement Zipties


Suggested Tools:



Wire Cutter

Assembly:

- 1 Begin by unplugging your station. Pull up on the station as a whole after unplugged, the screw on the back should shift as shown.

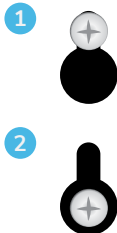


- 2 Remove station from wall by pulling straight out from the wall and set onto a flat surface for cable replacement.



Assembly Continued:



- 3 Remove the ziptie located near the top of the station. This secures the wires to stay in place and will need to be replaced.

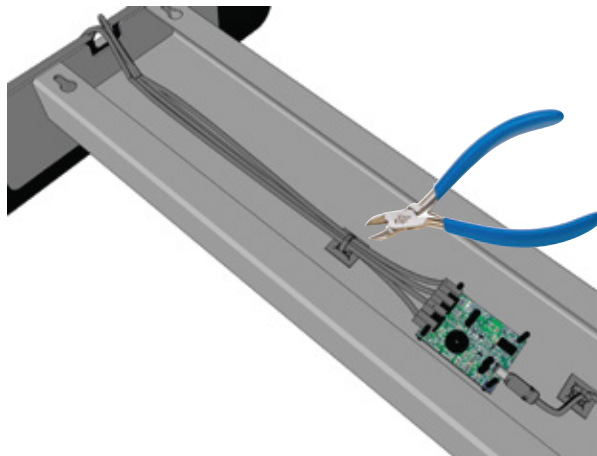

- 4 Locate the main circuit board and unplug the USB cables. Replace with new cables (ensure correct order of cable see graphic below).



- 5 Resecure the ziptie from step 3 around ziptie pad to secure new cables into place. Repeat step 1 in opposite order to reattach station back onto wall.

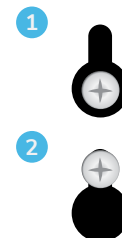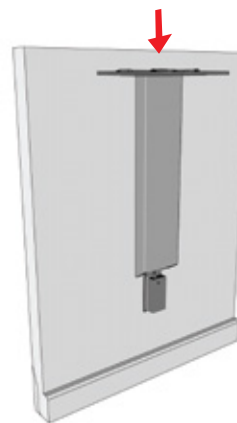

Need more info?